

The map illustrates the Eastern Apron area, showing the Terminal, Tower, and various aprons. Key features include:

- Eastern Apron**: The main apron area at the top of the map.
- Southern Apron**: Located below the Eastern Apron.
- Hart Apron**: Located to the right of the Eastern Apron.
- Terminal**: The main building, located between the Eastern and Southern Aprons.
- TWR (Tower)**: Located near the Eastern Apron.
- TWR PAD**: Located near the Tower.
- ITINERANT GA APRON MAX SPAN 12m**: Located near the Terminal.
- COMPASS SWING BAY**: Located to the right of the Hart Apron.
- Runways**: RWY 17/35 is shown running vertically through the center.
- Grid Coordinates**: The map is overlaid with a grid of coordinates, including:
 - Horizontal: 37 43 24S, 37 43 30S, 37 43 36S, 37 43 42S, 37 43 48S, 144 53 36E, 144 53 42E, 144 53 48E, 144 53 54E, 144 54 00E, 144 54 06E, 144 54 12E.
 - Vertical: R, C, J, P, N, B.
- Scale**: 1:8000 METRES.
- Compass**: Indicated by a compass rose showing 11°E.

PARKING POSITION INFORMATION

STAND	CO-ORDINATES		ELEV (ft)	CAPACITY	HYDRANT FUEL	DOCKING SYSTEM
20	37 43 36.22S	144 53 56.93E	257	CL60	TANKER	MARSHALLER
21	37 43 37.27S	144 53 55.86E	256	CL60	TANKER	MARSHALLER
22	37 43 37.03S	144 53 54.38E	255	SF34	TANKER	MARSHALLER
23	37 43 37.09S	144 53 52.69E	253	SF34	TANKER	MARSHALLER
24	37 43 38.53S	144 53 52.11E	252	SF34	TANKER	MARSHALLER
25	37 43 40.22S	144 53 52.40E	252	E145	TANKER	MARSHALLER
26	37 43 40.74S	144 53 54.35E	253	CL60	TANKER	MARSHALLER
27	37 43 40.50S	144 53 55.42E	254	F100	TANKER	MARSHALLER
28	37 43 41.28S	144 53 57.34E	253	F100	TANKER	MARSHALLER
30	37 43 43.18S	144 53 55.79E	252	B350	TANKER	
31	37 43 43.11S	144 53 54.88E	252	B350	TANKER	
32	37 43 42.98S	144 53 53.97E	251	B350	TANKER	
33	37 43 42.88S	144 53 53.06E	251	B350	TANKER	
34	37 43 42.79S	144 53 52.15E	250	B350	TANKER	
35	37 43 44.50S	144 53 54.52E	250	B350	TANKER	
36	37 43 44.21S	144 53 51.72E	248	B350	TANKER	

MENAP01-183