
# STANDARD INSTRUMENT DEPARTURES (SID) **GOLD COAST SEVEN DEPARTURE (RADAR) - RWY 14 & 32**

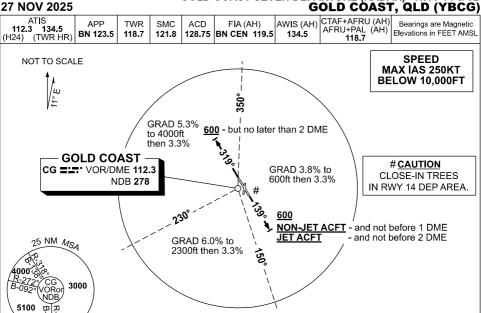

# GOLD COAST SEVEN DEPARTURE (RADAR)

## **RWY 14** #

10 NM MSA 4600

- Track 139°
- NON-JET ACFT AT or ABV 600ft but not before 1 DME turn to assigned heading or track <u>JET ACFT</u> - AT or ABV 600ft but not before 2 DME turn to assigned heading or track.
- · When directed, Contact BN Approach for Radar Vectors.

#### **RWY 32**

- Track 319°
- AT or ABV 600ft but not later than 2 DME, turn to assigned heading or track.

GNSS permitted in lieu of DME Reference waypoint CG VOR

· When directed, Contact BN Approach for Radar Vectors.

### COMMUNICATIONS FAILURE PROCEDURE

On recognition of communication failure:

- Squawk 7600.
- · Maintain last assigned vector for two minutes and, if necessary, climb to minimum safe altitude to maintain terrain clearance, then
- Proceed in accordance with the latest ATC route clearance acknowledged.

Changes: REMOVED RWY 17 SID, SECTOR PDG CHANGE.

BCGDP01-185

