USE QNH

NDB-A or VOR-A

16 JUN 2022

TAMWORTH, NSW (YSTW)

ATIS	TWR	SMC	FIA (AH)	CTAF+AFRU (AH) AFRU+PAL (AH)	Bearings are Magnetic Elevations in FEET AMSL
116.0 123.8	119.4 118.25 (HJ)	121.9	BN CEN 127.1	119.4	

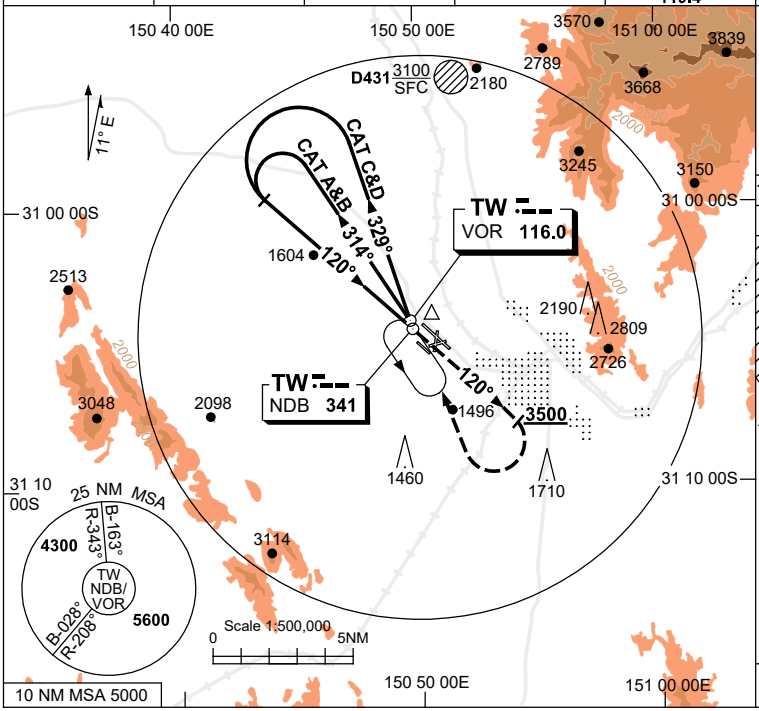

Holding at NDB/VOR

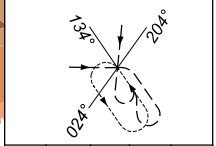

TR IN	TURN	TIME	MIN ALT	DME LMT
314°	Left	1	4000	

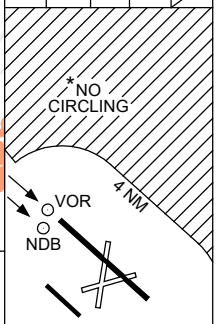

AD ELEV 1335

DME DIST				NOT APPLICABLE							
ALT											

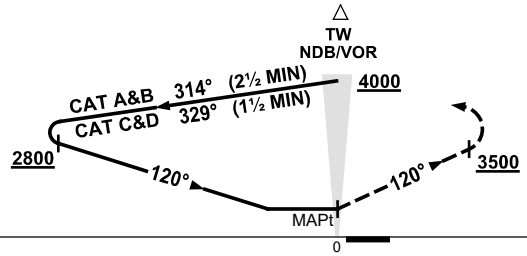

MISSED APPROACH:
TRACK 120°, AT 3500FT.

- **DURING TWR HR:** PROCEED AS DIRECTED BY ATC.
- **OUTSIDE TWR HR:** TURN RIGHT, TRACK TO VOR or NDB, CONTINUE CLIMB TO 4000FT.

NOTES

1. MAX IAS: HOLDING: 210KT. INITIAL: CAT C&D 185KT.
2. *CAT A,B&C NO CIRCLING NE OF RWY 12L/30R BEYOND 4NM. MAX IAS 170KT.
3. CAT D NO CIRCLING NE OF RWY 12L/30R.
4. **COLOUR**: SEE SPEC NOTICES.

CATEGORY	A	B	C	D
CIRCLING *	**2170** (835-2.4)		**2400** (1065-4.0)	**2400** #(1065-5.0)
ALTERNATE	(1335-4.4)		(1565-6.0)	(1565-7.0)

Changes: UNLIT 1710FT OBST.

STWNB01-171

© Airservices Australia

airservices