


STANDARD INSTRUMENT DEPARTURES (SID) VANDI NINE DEPARTURE (NON-JET) (RNAV) DARWIN, NT (YPDN)

19 MAR 2026

ATIS 128.25 308 316.2	ACD 126.8	SMC 121.8	TWR 133.1	APP-E 125.2 APP-W 134.1	Bearings are Magnetic Elevations in FEET AMSL
-----------------------------	--------------	--------------	--------------	----------------------------	--

NOT TO SCALE

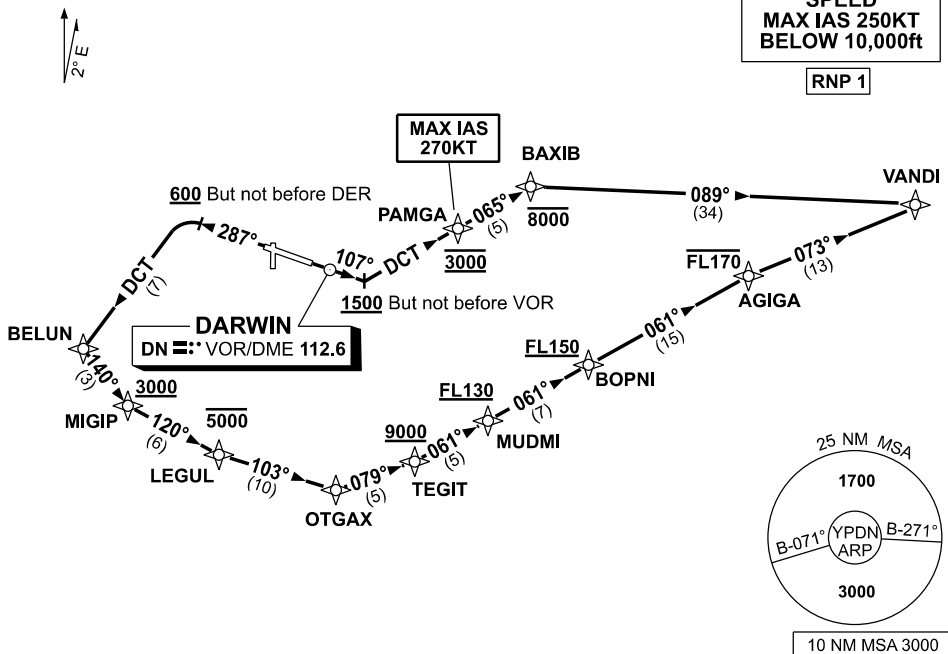

VANDI NINE DEPARTURE

RWY 11

- GRAD 5.0% to 300ft then 3.3%
- MAX IAS 270KT to PAMGA
- Track 107°
- AT or ABV 1500ft, but not before DN VOR
- turn LEFT track DCT to PAMGA
- Cross** PAMGA AT 3000ft
- Track 065° to BAXIB
- Cross** BAXIB AT or BLW 8000ft
- Turn RIGHT track 089° to VANDI

RWY 29

- GRAD 3.3% (7% to 3000ft)
- Track 287°
- AT or ABV 600ft, but not before DER,
- turn LEFT track DCT to BELUN
- Turn LEFT track 140° to MIGIP
- Cross** MIGIP AT or ABV 3000ft
- Turn LEFT track 120° to LEGUL
- Cross** LEGUL AT or BLW 5000ft
- Turn LEFT track 103° to OTGAX
- Turn LEFT track 079° to TEGIT
- Cross** TEGIT AT or ABV 9000ft
- Turn LEFT track 061° to MUDMI
- Cross** MUDMI AT or ABV FL130
- Track 061° to BOPNI
- Cross** BOPNI AT or ABV FL150
- Track 061° to AGIGA
- Cross** AGIGA AT or BLW FL170
- Turn RIGHT track 073° to VANDI